


Indoor/Outdoor 3-Station Easel

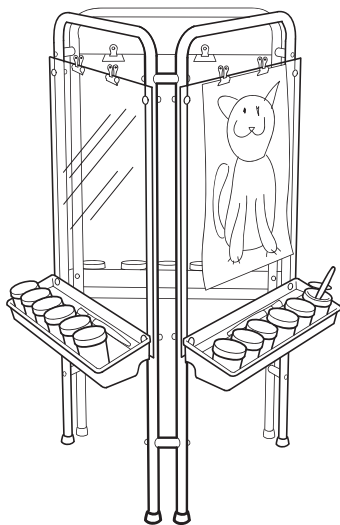

To assemble your new easel, simply follow the instructions on the back of this guide. In only a few minutes, your students will be creating washable works of art!


Important Note: Be sure students use only washable paints and markers with this easel. Oil-based paints and markers cannot be removed from the surface.

What's Included

- 3 U-shaped easel legs
- 6 braces
- 3 clear acrylic easel backs
- 3 paint trays
- 6 easel clips
- 6 medium bolts
- 6 long bolts
- 6 short bolts
- 30 washers
- 18 nuts

You will need a Phillips screwdriver and pliers to assemble the easel.

(continued on back)

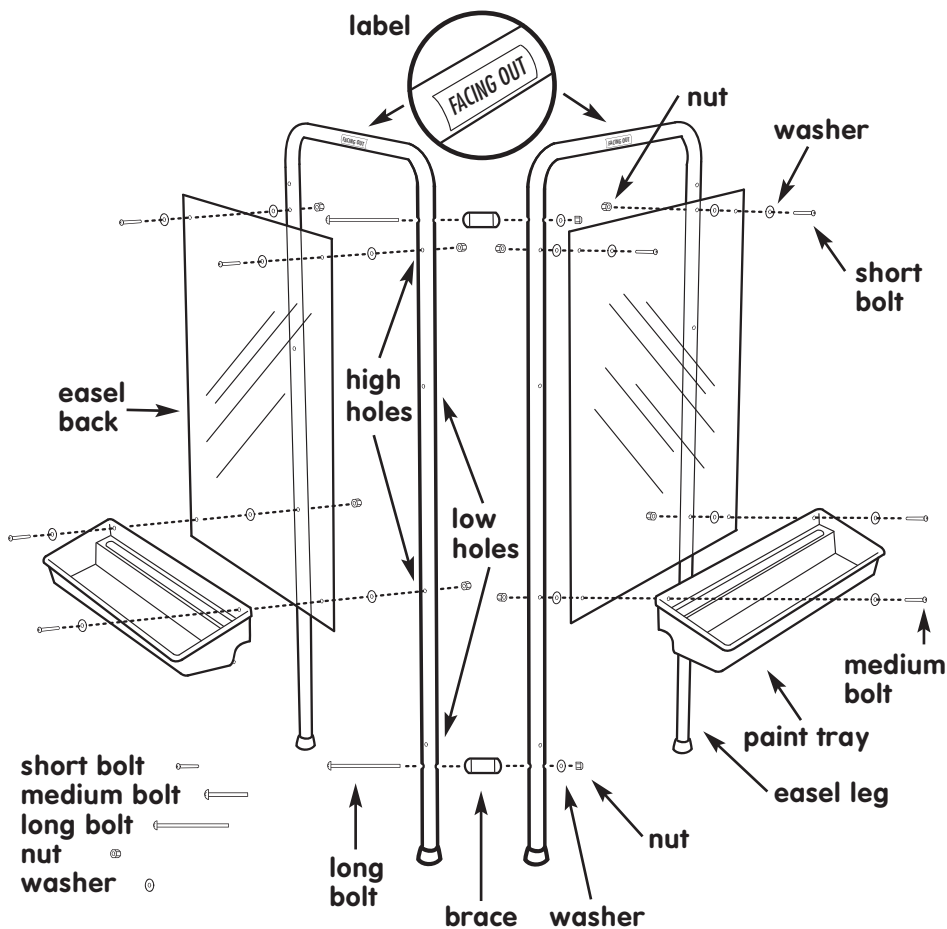

1. Each easel back can be attached in a high or low position to suit your students' needs. The high position is shown above. For the low position, insert the bolts through the lower set of holes on the legs.
2. Assemble the easel as shown above. (For clarity, the third side is not shown. Assemble it in the same way as the others.)
 - Make sure the "facing out" labels on all of the legs face away from the center.
 - When attaching the short and medium bolts, place the washers between the bolts and the easel parts. For the long bolts, the washers go between the easel legs and the nuts, as shown above. For all bolts, also place a washer between the easel legs and the acrylic panel.
 - Position each nut so that the plastic side faces away from the leg. Hold the nut in place with pliers and use a Phillips screwdriver to tighten the bolt.