



Easy-Ride™ Scooter Trike

Engineered to stay on the move—all day, every day, year after year—your Scooter Trike is one of the most durable institution-quality vehicles available. And it's guaranteed for five full years!

The trike features lightweight rims and tires that make it easy to maneuver. Two 6" rear wheels provide extra stability for first-timers. This is perfect for children who are not quite ready for pedaling, as the low seat height allows the trike to be used as a "scooting trike."

Easy-Ride Scooter Trike Unlimited Warranty

*We think you've just purchased the toughest Scooter Trike in the world.
Here's what we'll do to prove it!*

At no cost, we will replace ANY parts that break for ANY reason during the first five years you have the Easy-Ride Scooter Trike.


We have a complete stock of all Easy-Ride Scooter Trike parts so that you can buy anything you need from us after this warranty expires. See the parts list inside.

Direct all requests to: Lakeshore Learning Materials
2695 E. Dominguez St.
Carson, CA 90895
(800) 428-4414



WARNING:

TO AVOID SERIOUS INJURY: Continuous adult supervision required; never use near motor vehicles, streets, swimming pools, hills, steps, or sloped driveways. Always wear shoes when using the scooter trike. Allow only one rider, where appropriate.

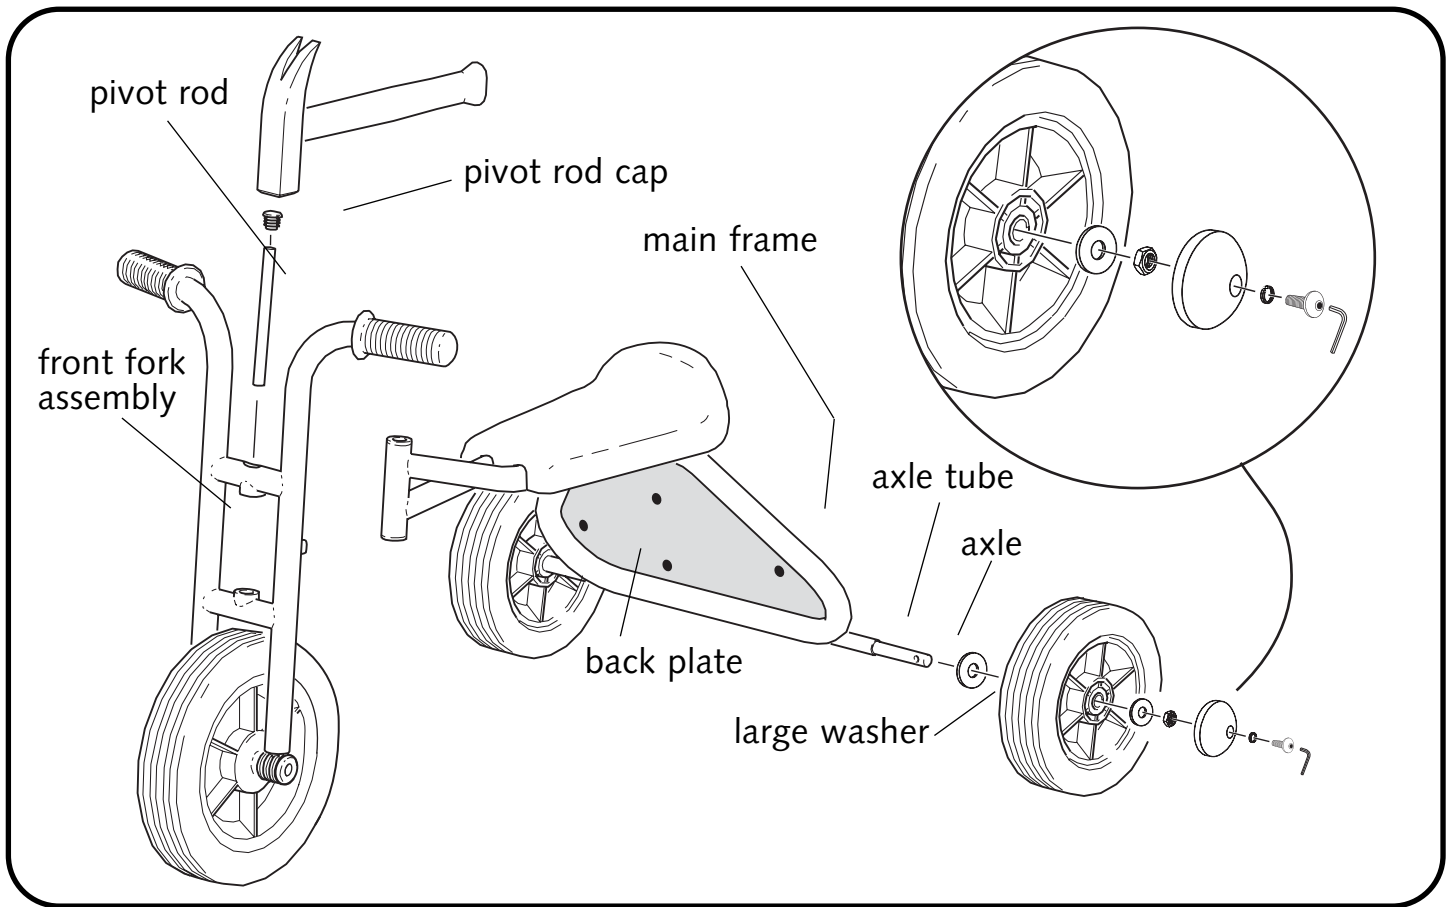


How to Assemble Your Easy-Ride Scooter Trike

To assemble your trike, all you need is a hammer. (We've provided a wrench and an Allen key.)

- Position the front fork assembly and the main frame so that the pivot rod holes are aligned. Be sure the black rubber stoppers on the front fork assembly are facing the rear of the trike. Next, insert the pivot rod through the holes in the front fork assembly and the main frame.
- Push the pivot rod cap onto the top of the pivot rod. Use a hammer to gently tap the cap into the hole.
- To attach the rear wheels, first unscrew and discard the black plastic cap that protects the end of the axle. Turn the trike upside-down and find the notch at one end of the frame's axle tube. Slide the end of the axle into that end of the tube, and turn it until the tab on the axle fits into the notch of the tube. Next, slide the larger flat washer over the axle, followed by the wheel and then the remaining flat washer. Screw the nut onto the axle and use the wrench to tighten the nut securely.
- Position the hubcap over the end of the axle. Fit the spring washer into the top of the hubcap, then insert the screw and use the Allen wrench to tighten the screw firmly. That's it—your Easy-Ride Scooter Trike is now ready for use!

Before You Ride...

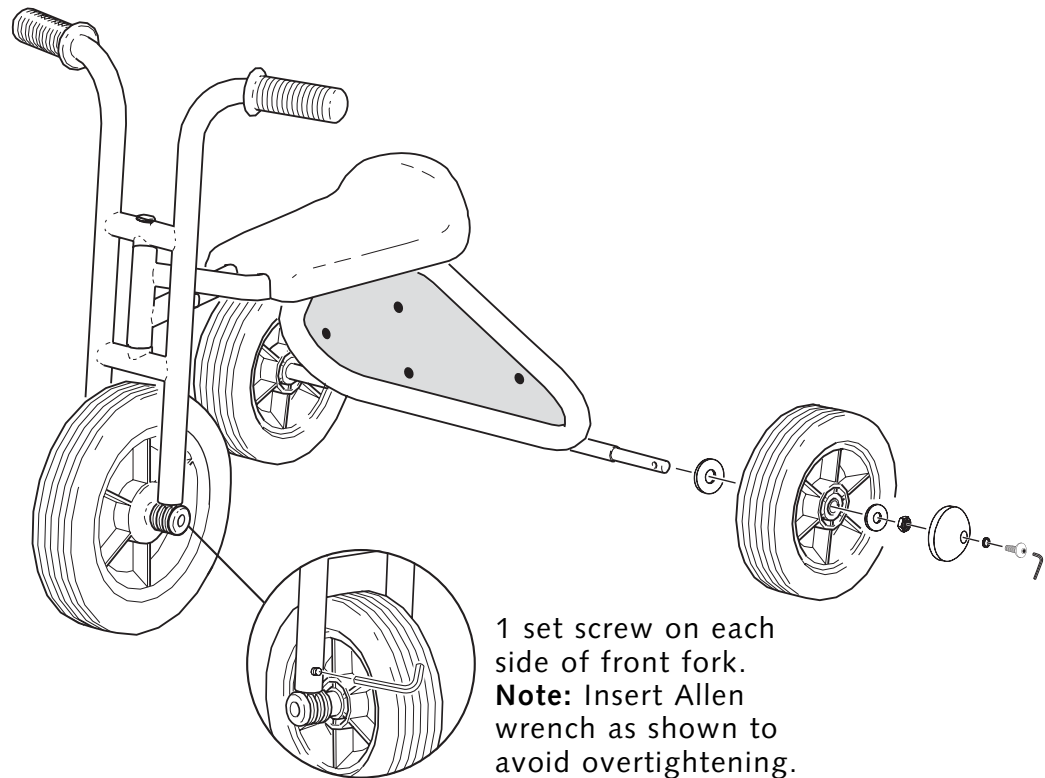

Before children ride their new vehicle, have an adult use the enclosed tool to tighten all pre-assembled hardware. Please refer to the above illustration to help you locate the set screws that require tightening. Once you have completed this step, the vehicle will be ready for use!

To maximize safety, inspect the scooter trike at least once a month, following these steps:

- Look for excess wear on tires and handgrips; replace as needed.
- Make sure rubber stoppers, the seat, and the main frame are secure.
- Tighten hardware as needed.

If you have any questions, please don't hesitate to call our Customer Service Department at (800) 428-4414.

Note: It is recommended that riders should always wear a properly fitted helmet that complies with U.S. Consumer Product Safety Commission (CPSC) Standard 16 CFR 1203.

To order replacement parts, see back.

How to Order Replacement Parts for Your Scooter Trike

After your warranty has expired, a time may come when a part needs to be replaced because of normal wear and tear.

1. Use the diagram below to determine exactly what part needs to be replaced.
2. Locate the part number on the list at right.
3. For prices and ordering information, contact our Customer Service Department at (800) 428-4414.

PARTS LIST

M108	Pivot rod cap only	M120	Pivot rod and cap
M109	Hubcaps (2) with hardware (Allen key, 4 washers, 2 spring washers, nut, and screw)	M121	Seat bolt with washer, plastic washer, and wrench
M116	Rear wheel with hardware	M122	Pinch guards (2), nylock rivet screws (2), Allen key
M117	Rear axle with 2 hubcaps and hardware	M144	Back plate
M118	Seat (with bolt, washer, plastic washer, and wrench)	M145	Front fork with complete front wheel assembly
M119	Handgrips (set of 2)	M146	Front wheel assembly
		M158	Main frame

This detailed drawing indicates every individual part that makes up your new Easy-Ride First Trike.

